

Programming an Overhead Door or Genie Remote Control

Note: Factory sets different codes for each remote control.
Remote controls will NOT work if the Safe-T-Beam system is malfunctioning.
When programming remote control, keep at least 24 inches away from antenna.

1) Program one-button remote

- Locate learn code button and learn indicator on power head.
- Remove lens cover on back of power head.
- Press and release learn code button on power head.
- LED on power head will blink 2 times per second
- Press and release a remote control button
- LED on power head stops blinking.
- Press and release same remote button again.
- LED goes out.
- Remote is now programmed.

2) Program multi-button remote control

- Repeat step one for each button.
- **Note:** Each button on a multi-button remote control is for a different operator.

3) Operate remote control

- Point remote control at door and press button
- Door moves
- Press button again
- Door stops
- Press button again
- Door reverses

QUESTIONS???

Please contact us and we will be happy to assist you.

Overhead Door Company of San Antonio – Residential
385 North Weidner Road
San Antonio, TX 78233
Telephone: (210)655-8821
Fax: (210)590-7738
Website: <http://www.ohdcsa.com>