

# Programming an Overhead Door or Genie Wireless Keypad

**NOTE:** Only perform step 1 if you are resetting the keypad completely. If you only want to change your PIN, skip step one, and perform only steps 2 and 3.

## 1) Resetting the Wireless Keypad

- Open cover half way.
- Press and hold "PROG" and "8" while fully opening cover.
- INDICATOR will blink once and go out.
- Close cover fully.
- NOTE: Wireless Keypad memory is now set the same as when it left the factory. You can now perform step 2.

## 2) Entering PIN

ACTION	KEYPAD INDICATOR
Open cover fully	Blinks once and goes out
Press 3-5-7	
Press "PROG"	Blinks once each second
Enter PIN (up to 8 digits)	
Press "PROG"	Double blinks each second
Close cover fully	

- NOTE: Your Wireless Keypad is now ready to signal your Door Operator. Your Door Operator must be programmed to accept the signal from your Wireless Keypad, so proceed to step 3.

## 3) Programming Door Operator

**Caution!!!** During this programming the Door Operator could begin to run. Be sure to stay away from the moving door and its parts. To prevent the door from moving, close door then disconnect it from the Door Operator by pulling the Red Emergency Release Handle.

- Find the Learn Code Button and Radio Signal Indicator located on the Door Operator power head. Open the Wireless Keypad Cover fully.

ACTION	KEYPAD INDICATOR
Press Operator Learn Code button	Blinks
Enter PIN	
Press "Send"	Stays on
Press "Send" again	Goes out
Press "SEND" again to test system	Motor runs
Press "SEND" again to test system	Motor stops

- Use the Emergency Release to reconnect the Door to the Door Operator. Your system is now ready to use.

QUESTIONS???

Please contact us and we will be happy to assist you.

Overhead Door Company of San Antonio – Residential  
385 North Weidner Road  
San Antonio, TX 78233  
Telephone: (210)655-8821  
Fax: (210)590-7738  
Website: <http://www.ohdcsa.com>